DO IT YOURSELF
Clear Hurricane Window Shutters

www.hurricaneshutters2go.com

Panel Mate
Installation Instructions for *Opening with No Sill*

Step 1: Take your first panel and hold it level 2" below your opening. Allow equal amounts of overhang on each side. Hold panel firmly against wall.

Step 2: Using your provided masonry bit, drill a hole through the first valley on bottom row, starting in at least 2" from edge of panel. Allow drill bit to score the side of the wall surface for marking. Repeat this process on all valleys on both sides.

Step 3: Remove panel. Using your hammer setting on your drill, drill holes in all areas marked by the previous drilling. Make sure to drill in a depth at least 2".

Step 4: Next using your provided hex tool bit, screw panel mates securely into all holes.

Step 5: Take your panel and slide it on to the panel mates. (Note: you may need to make the holes in the panel slightly bigger to easily slide panels onto mounted panel mates).

Step 6: Fasten panel with rubber washers and wing nuts.
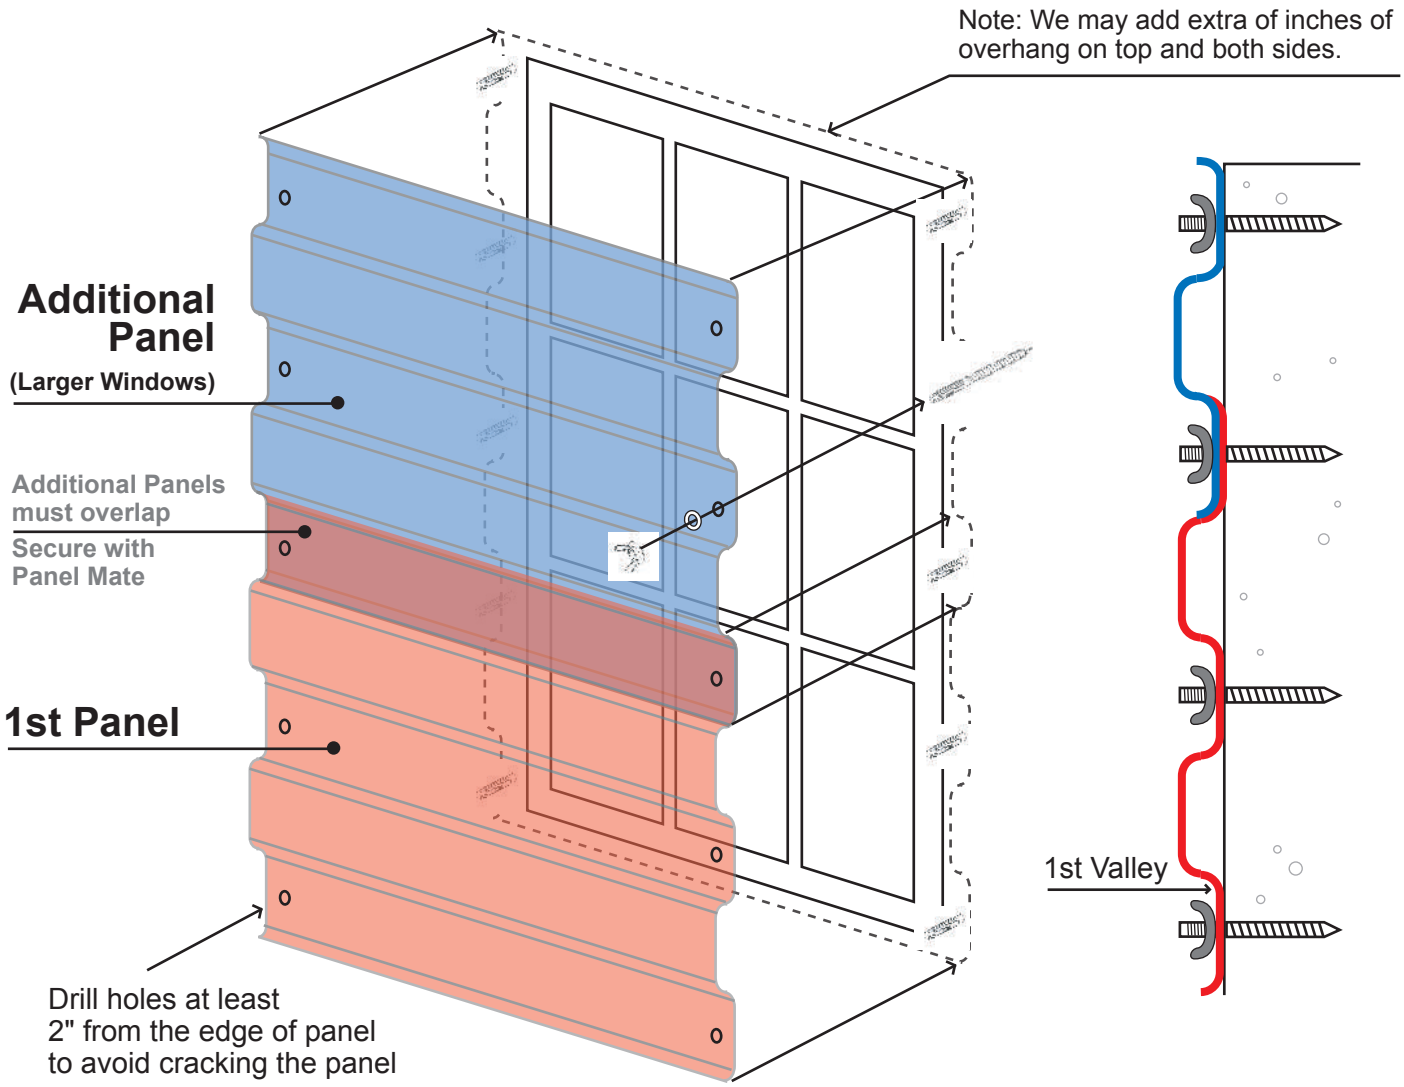
Additional Panels: For installs with additional panels, repeat this process but make sure when starting the additional panel, you overlap the first valley with the one that is currently installed. Additional panels will be marked with a sticker (Kitchen A, Kitchen B) to show their order.